


EasyView™ Light Meter with Memory

✓ **Store and recall up to 50 measurements**
With relative or real time clock stamp

Features:

- Wide measurement range to 99,990Fc (999,900Lux) with resolution of 0.001Fc and 0.01Lux
- Luminous intensity (candela) calculations
- Ripple function excludes the effect of stray light from the primary light source measurement
- Auto Power off with disable feature
- Multiple point average function
- Timed-Hold, Relative in absolute value or % deviation, and Comparator function with high low alarms
- Cosine and color corrected, CNS 5119 Class II
- Complete with built-in stand, light sensor and protective cover with 36" (0.9m) cable, protective holster, 6 AAA batteries, and carrying case

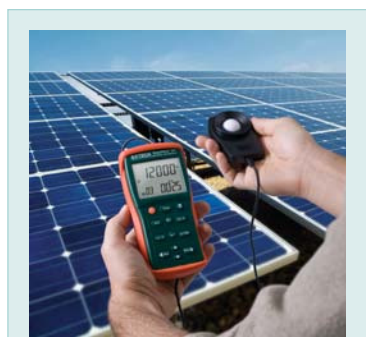

Wide range for taking measurements in direct sunlight

Specifications	
Display Counts	999,999 count LCD
Fc Range	9.999Fc, 99.99Fc, 999.9Fc, 9,999Fc, 99,990Fc
Lux Range	99.99Lux, 999.9Lux, 9999Lux, 99,990Lux, 999,900Lux
Max. Resolution	0.001Fc/0.01Lux
Basic Accuracy	±3%
Cosine & Color Corrected:	Yes
Dimensions:	5.9 x 2.8 x 1.4" (150 x 72 x 33mm)
Weight:	11.29oz (320g)

Ordering Information:

EA33.....EasyView™ Light Meter with Memory
EA33-NISTEA33 with NIST Certificate

